


MAINTENANCIE

TIP: OIL CAN BE REMOVED WITH A SUCTION GUN FOUND AT MOST AUTO PARTS STORES. IF A GUN IS NOT AVAILABLE, ATTACH A VACUUM HOSE TO A PLASTIC SQUEEZE BOTTLE AND SUCK OIL FROM CASE.

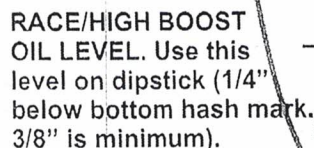

OIL CHANGE MAINTENANCE SCHEDULE

Next oil change due $\rightarrow +12,000 =$

 $+12,000 =$

R010811